

TITLE

GC-024 OPERATING INSTRUCTIONS







1. OPERATING INSTRUCTIONS

CAUTION Wear SAFETY GLASSES whenever handling batteries

1.1. Caution

- 1.1.1. Before using the charger, please read all instructions and cautionary markings.
- 1.1.2. The charger must be used in a well ventilated area. It is for indoor use only.
- 1.1.3. This charger is designed for 24V lead-acid type batteries only.
- 1.1.4. Make sure the charger leads are connected to the correct terminal.



TITLE

GC-024 OPERATING INSTRUCTIONS

NC

- 1.1.5. When the charger is in use, it will heat up slightly, this is normal.
- 1.1.6. Avoid operating the charger in hot conditions. If needed, provide additional fan cooling.
- 1.1.7. Disconnect the AC power cord when charging is completed
- 1.2. Instructions
 - 1.2.1. Connect the polarized clips to the appropriate battery terminal.
 - 1.2.2. Connect the charger to main power, and turn charger on. At this point, the Orange LED light turns on.
 - 1.2.3. Charging will be complete when the Green LED turns on.
 - 1.2.4. The charger will then revert to Float, with the LED at Green, while charging at the lower voltage. The battery may be left connected and charger left on for up to 6 months until battery is required for installation.

2. TROUBLESHOOTING

Problem and Symptoms	Possible Reason	Solution
If power LED indicator is off and no output	1. No AC input	1. Check AC power source
voltage when charger is plugged in	2. Charger malfunction	2. Notify charger supplier
If AC power is normal, but Orange LED (charging) is off when charging	1. The charger connections may be reversed	1. Check output cable
	2. The output connection may be open	2. Check output cable
	3. The fuse socket may be loose	3. Check DC fuse
	4. Charger malfunction	4. Notify charger supplier
If AC power is normal but Orange LED (charging) LED is lit for a long time	1. Battery malfunction	 The battery is not charging normally. Stop charging and replace battery.
	2. Charger malfunction	2. Notify Teledyne Battery Products
If the charging indicator turns to fully	1. Battery is fully charged	1. The battery is fine
charged Green LED immediately	2. Battery malfunction	2. Battery is not fully charged -
	3. Charger malfunction	may be defective. Replace
	-	battery
		3. Replace charger

3. SPECIFICATIONS

Input Voltage	100VAC-220VAC ± 10%, Auto Switch
Input Frequency	50/60Hz
Output Current	7A
Output Equalizer Voltage	28.8VDC ± 0.2V
Output Float Voltage	26.35VDC ± 0.1V
Dimensions (L, W, H, inches)	7.3 x 3.5 x 1.9
Weight	1.8 lb.